

PSB-502418 PSB 27,6V/1,8A enclosed switch mode buffer power supply



Edition: 3 from 10.02.2014 Supercedes edition: 2 from 04.02.2013

EN

Features of the power supply:

- DC 27,6V/1,8A uninterruptible power supply*
- wide AC input voltage range 176÷264V
- high efficiency 77%
- controlling of battery charging and maintaining
- protecting of battery against excessive discharging (UVP)
- battery charging current 0,3A
- additional accessories: automation module MPSB24 (technical outputs):
 - FAC technical output indicating AC power loss
 - FPS technical output indicating PSU failure
 - FLB technical output indicating battery low voltage

- battery output is full protected against shortcircuit and reverse connection
- LED optical signalisation
- protections:
 - SCP short-circuit protection
 - OVP overvoltage protection
 - overvoltage protection
 - overload (OLP)
- warranty 2 year from the production date

1. Technical description.

1.1 General description.

Buffer-type power supply units are intended for continuous power supply to devices that require stabilised voltage of **24V DC (+/-15%)**. The power supply provides a voltage of **U=27,6V DC** with an output current of **I=1,5A+ 0,3A battery charging***. In case of power voltage decay, prompt switching to battery supply occurs. The power supply has the following protections: short-circuit (SCP), overload (OLP) and overvoltage (OVP).

Under normal operation, the total current drawn by the equipment may not exceed I = 1,5 A. Maximum battery charging current: 0,3 A. Total device current + battery: 1,8 A max.

1.2. Technical parameters.

Supply voltage	176 ÷ 264V AC	
Current consumption	0,6A@230VAC max.	
Supply power	50W max.	
Efficiency	77%	
Output voltage	22V÷ 27,6V DC- buffer operation 19V÷27,6V DC - battery operation	
Output current t _{AMB} <30℃ 1,5A + 0,3A battery charging - see chart 1		
Output current t _{AMB} =40℃	1A + 0,3A battery charging - see chart 1	
Voltage adjustment range	24÷28V DC	
Ripple voltage	150mV p-p max.	
Battery charging current	0,3A max.	
Short-circuit protection SCP	electronic, automatic recovery	
Overload protection OLP	105-150% of power supply, automatic recovery	
Overload protection (battery) OLP	polymer fuse (PTC)	
Surge protection	varistors	
Overvoltage protection OVP	>32V (automatic recovery)	
Excessive discharge protection UVP	U<19 V (± 5%) – disconnection of battery	
Optical signalisation	green LED- presence of AC voltage	
Output of optical signalization	LED AC- presence of AC voltage LED DC- presence of DC voltage on power supply output	
Additional accessories	Module MPSB24 (technical outputs)	

^{*} See chart 1

Operation conditions	2-nd enviromental class, temperature: -10 °C÷40 °C relative humidity 20%90%, without condensation	
Dimensions (LxWxH)	159 x 97 x 42 [mm]	
Net/gross weight	0,48kg / 0,53kg	
Protection class PN-EN 60950-1:2007	I (first) - requires a protective conductor (PE)	
Connectors	power-supply: Φ0,63÷2,5 I/O PCB : Φ0,41÷1,63 battery output BAT: 6,3F-2,5/40cm, output of optical signalization: plug 3-pin 5 mm	
Electrical strength of insulation: - between input (network) circuit and output circuits of power-supply (I/P-O/P) - between input circuit and PE protection circuit (I/P-FG) - between output circuit and PE protection circuit (O/P-FG)	3000 V/AC min. 1500 V/AC min. 500 V/AC min.	
Insulation resistance: - between input circuit and output or protection circuit	100 MΩ, 500V/DC	
Storage temperature	-20°C+60°C	
Vibrations and impulse waves during transport	according to PN-83/T-42106	

1.3. Output current vs temperature.

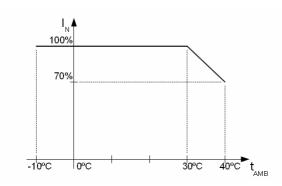


Chart 1.
Allowable output current from the power supply depending on ambient temperature

2. Installation.

2.1. Requirements.

The buffer power supply shall be mounted by the qualified installer having appropriate (required and necessary for a given country) permissions and qualifications for connecting (operating) 230V/AC installations and low voltage installations. The device shall be mounted in closed rooms, according to the environment class II, of the normal air humidity (RH=90% max. without condensation) and the temperature within the range from -10 $^{\circ}$ C to +40 $^{\circ}$ C.

The power supply shall be mounted in a close casing (a cubicle, a terminal device) and in order to fulfill LVD and EMC requirements the rules for power-supply, encasing and shielding shall be observed according to application.

Due to the power supply design, the PE wire has to be connected to the corresponding connector of the supply unit. Operation without proper grounding of the power supply is not allowed!

Prepare the power supply loading balance before installation.

Under normal operation, the total current drawn by the device may not exceed I = 1,5 A. Maximum battery charging current: 0.3 A. Total device current + battery: 1,8 A max.*

2.2. Installation procedure.

- 1. Before beginning installation, ensure that the power in the 230V AC power supply circuit is disconnected.
- 2. Install the unit in the previously selected place.
- 3. Connect the 230VAC power leads. Connect the PE cable (yellow-green) to an appropriate terminal on the power supply unit (marked with $\frac{\perp}{=}$).

-

^{*} See chart 1




The circuit of the shock protection shall be performed with a particular care, i.e. the yellow and green protection wire of the power cable shall be connected from one side to the terminal marked by the symbol of in the casing of the power-supply. Operation of the power-supply without the properly made and fully operational circuit of the shock protection is

UNACCEPTABLE!

It can result in failure of devices and electric shock.

- 4. Connect load/loads to proper output connectors of the power supply (positive end is marked as +V, negative as -V).
- 5. Connect battery to the unit according marks (colors).
- 6. After the completion of tests and trial activation, close the housing, cabinet etc.

2.3. Description of terminals.

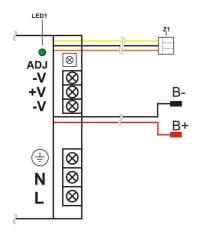

	_			
Fig 1.	Descri	ption of	terminals	

Elements/connectors [Fig.1]	Description	
L, N, <u></u>	L-N - input voltage connectors 230 V AC, — protective conductor connector	
-V	Power supply output (0V)	
+V	Power supply output (+27,6V)	
LED1	LED signals the presence of AC voltage	
ADJ	Potentiometer - output voltage adjust	
B+	Battery terminal- positive (+)	
B-	Battery terminal- negative (-)	
Z1	Connector of optical signalization	

2.4. Dimensions and fitting of the PSB502418 power supply.

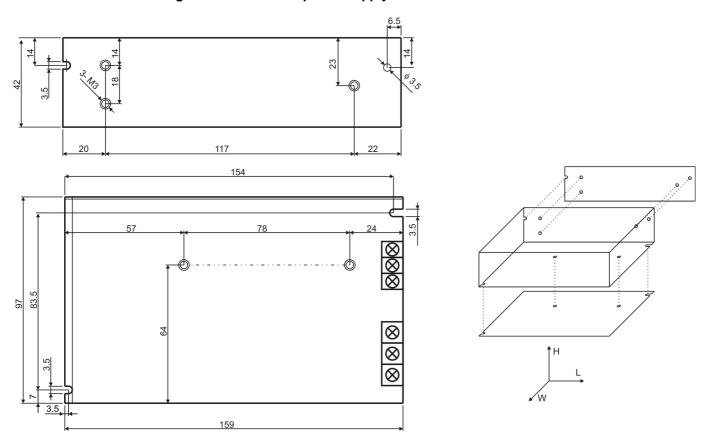


Fig. 2. Dimensions of power supply.

3. Cooperation with the MPSB24 automation module (option).

The MPSB24 automation module is intended for indicating the operating status of buffer power supplies, PSB 27,6V type. The PCB board features LEDs that indicate PSU operating status (presence of AC voltage, presence of DC voltage, battery voltage). The module is also equipped with technical outputs of: **FAC** - AC power loss, **FPS** - PSU failure, **FLB** - low battery voltage.

Table 1. Elements of the PSU

Element no.	Description
[1]	LED indicating presence of AC power
[2]	LED indicating presence of DC power
[3]	LED indicating correct battery voltage
[4]	FAC- AC absence technical output – relay type
[5]	FPS- output indicating DC absence/PSU failure – relay type
[6]	FLB- output indicating battery low voltage – relay type
[7]	FAC- AC absence technical output – OC type
[8]	FPS- output indicating DC absence/PSU failure - OC type
[9]	FLB- output indicating battery low voltage - OC type
[10]	+V ,-V- DC supply output
[11]	L-N 230V/AC power connector, PE protection connector
[12]	Connector of extra LED indication
[13]	Battery connectors: +BAT =red, - BAT = black
[14]	V _{ADJ} - potentiometer, DC voltage adjustment

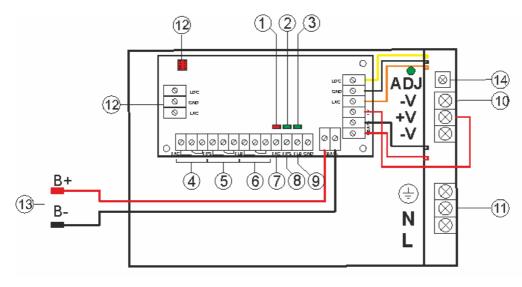


Fig. 3. The view of the PSU with the MPSB24 module.

4. Maintenance.

All maintenance procedures can be performed after the disconnection of the power supply from the electrical grid. The power supply does not require any special maintenance procedures, but in the case of significant dust accumulation, dusting using compressed air is recommended.

WEEE MARKING

According to the EU WEE Directive – It is required not to dispose of electric or electronic waste as unsorted municipal waste and to collect such WEEE separately.

WARRANTY

Pulsar K. Bogusz Sp.j. (the manufacturer) grants two -year warranty for the equipment, counted from the device's production date.

Pulsar K.Bogusz Sp.j.

Siedlec 150, 32-744 Lapczyca, Polska
Tel. (+48) 14-610-19-40, Fax. (+48) 14-610-19-50
e-mail: biuro@pulsar.pl, sales@pulsar.pl
http://www.pulsar.pl, www.zasilacze.pl