



U-PROX SE MINI

Universal miniature reader with OSDP

U-PROX SE MINI USER MANUAL


Description

U-PROX SE mini – the adjustable universal SmartLine reader for mobile credentials and proximity identifiers.


In conjunction with the U-PROX ID application and mobile identifiers U-PROX IDs allow any access control system to use smartphones as access system credentials.

Installation

1. Make small recess or hole (diameter is 14 mm) to connect cable under the reader's case

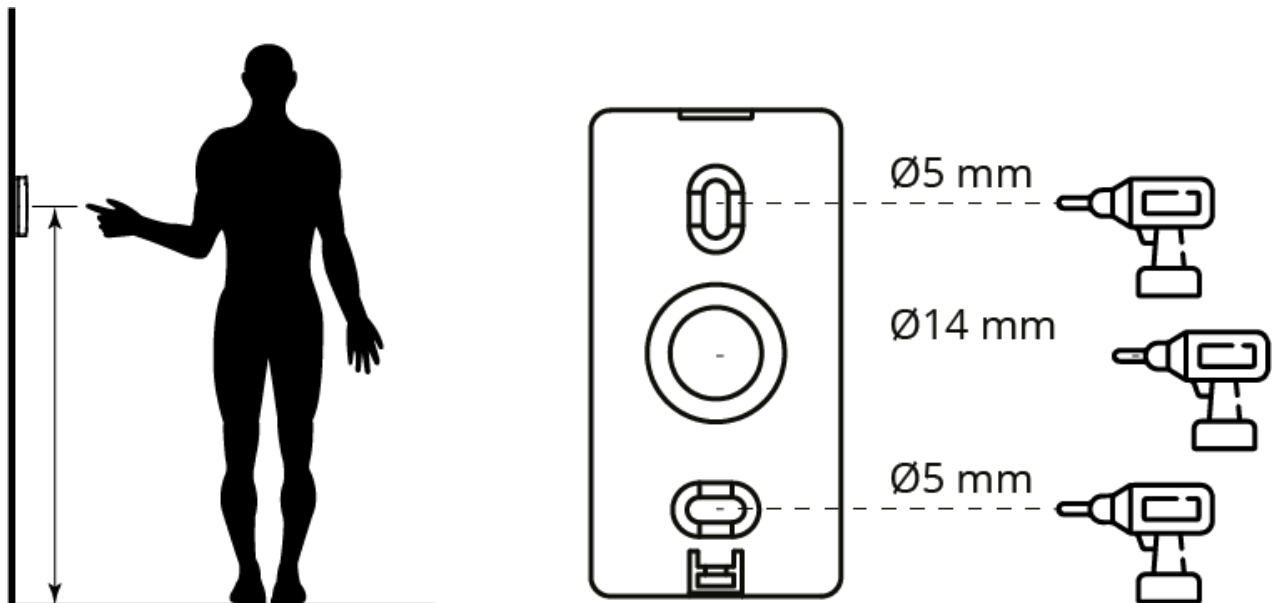

2. Loosen the screw at the bottom of the reader

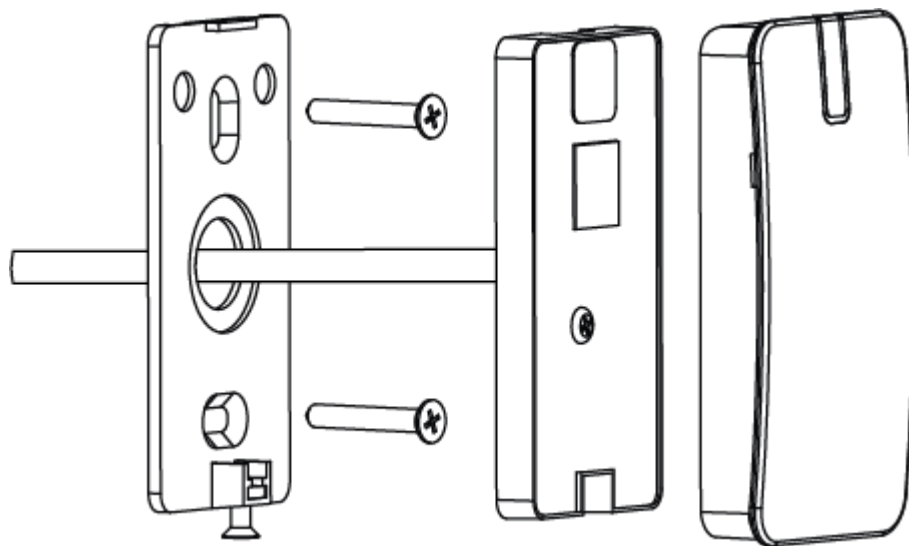

3. Remove the top cover, remove the back plate

4. Mount the back plate of reader on the wall using supplied plastic dowels and screws

5. Carry out wiring to the control panel

6. Insert the reader in the back plate

7. Place the top cover and tighten it with a screw


Installation on the metal surfaces may cause decrease of reading range.

Do not place readers closer than 20 cm one from another. It is possible to install two readers at a distance 10-15 cm of each other when their yellow wires (Hold/Sync) interconnected. This synchronizes the work of the readers, they will work alternately.

Connection

Seamless and easy connection to existing and new access systems, due to the OSDP, Wiegand 26, 32, 34, 37, 40, 42, 56, 58, 64, 80 bits interfaces, Wiegand with automatic selection, RS232 and TouchMemory supports.

We recommend to use multi-core signal cable with 0.22 mm² cross-section of each wire between reader and panel.

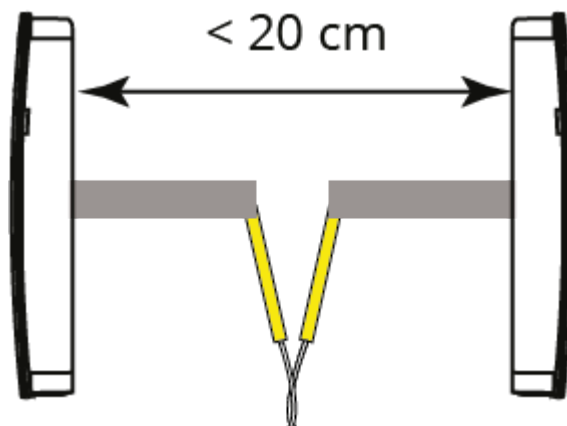

Wiegand

The reader connection wires functions are listed in the table.

+12V	EN red ES rojo	FR rouge PT vermelho	UA червоний PL czerwony
GND	EN black ES negro	FR noir PT preto	UA чорний PL czarny
Data0 (WD0)	EN green ES verde	FR vert PT verde	UA зелений PL zielony
Data1 (WD1)	EN white ES blanco	FR blanc PT branco	UA білий PL biały
Red LED (RD)	EN brown ES marrón	FR brun PT marrom	UA коричневий PL brązowy
Green LED (GN)	EN orange ES naranja	FR orange PT laranja	UA помаранчевий PL pomarańczowy
Beep	EN blue ES azul	FR bleu PT azul	UA синій PL niebieski
Hold or sync	EN yellow ES amarillo	FR jaune PT amarelo	UA жовтий PL żółty

We recommended to use following whiring when reader connected to the control panel with twisted pair.




OSDP

The reader connection wires functions are listed in the table.

+12V	EN red	FR rouge	UA червоний
	ES rojo	PT vermelho	PL czerwony
GND	EN black	FR noir	UA чорний
	ES negro	PT preto	PL czarny
A+	EN green	FR vert	UA зелений
	ES verde	PT verde	PL zielony
B-	EN white	FR blanc	UA білий
	ES blanco	PT branco	PL biały

We recommended to use following whiring when reader connected to the control panel with twisted pair.

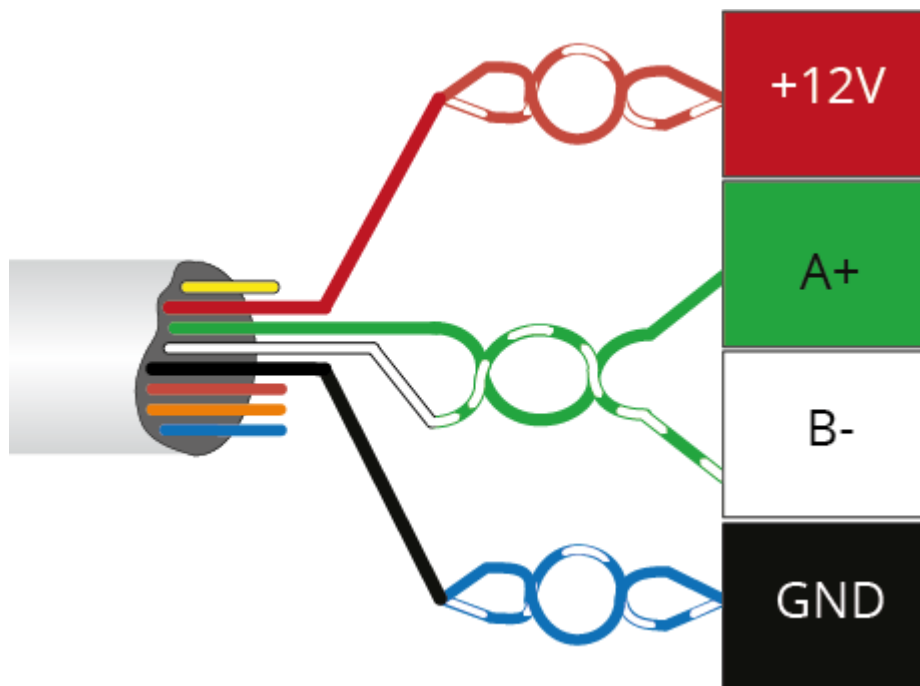

RS-232

The reader connection wires functions are listed in the table.

+12V	EN red	FR rouge	UA червоний
	ES rojo	PT vermelho	PL czerwony
GND	EN black	FR noir	UA чорний
	ES negro	PT preto	PL czarny
Rx	EN green	FR vert	UA зелений
	ES verde	PT verde	PL zielony
Tx	EN white	FR blanc	UA білий
	ES blanco	PT branco	PL biały


TouchMemory

The reader connection wires functions are listed in the table.

+12V	EN	red	FR	rouge	UA	червоний
	ES	rojo	PT	vermelho	PL	czerwony
GND	EN	black	FR	noir	UA	чорний
	ES	negro	PT	preto	PL	czarny
iButton	EN	green	FR	vert	UA	зелений
	ES	verde	PT	verde	PL	zielony

Red LED (RD)	EN	brown	FR	brun	UA	коричневий
	ES	marrón	PT	marrom	PL	brązowy
Green LED (GN)	EN	orange	FR	orange	UA	помаранчевий
	ES	naranja	PT	laranja	PL	poarańczowy
Beep	EN	blue	FR	bleu	UA	синій
	ES	azul	PT	azul	PL	niebieski
Hold or sync	EN	yellow	FR	jaune	UA	жовтий
	ES	amarillo	PT	amarelo	PL	żółty

We recommended to use following whiring when reader connected to the control panel with twisted pair.

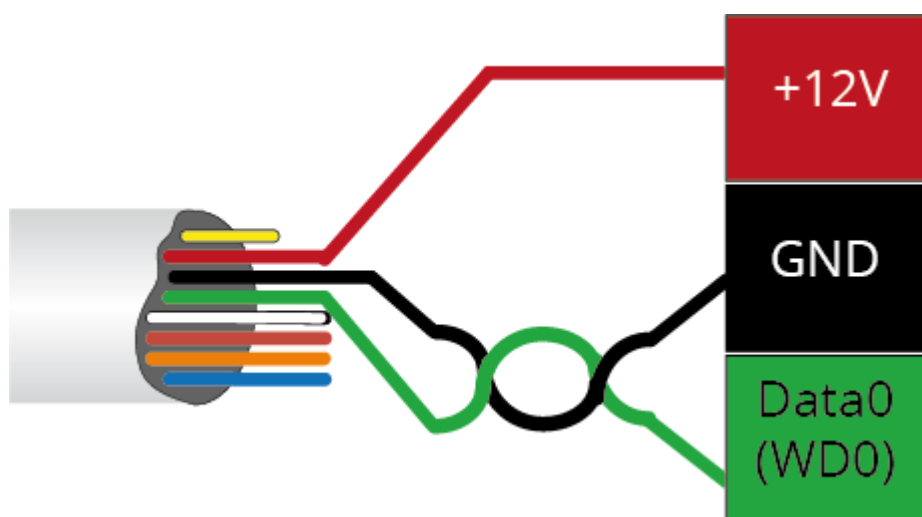

Configuration

With the free mobile application U-Prox Config, the reader can be completely adjusted — from the indication to the encryption modes.



The reader is supplied without the engineering password for programming specified. To connect and (re) set the password — connect inputs D0 (green) and D1 (white) with each other and apply power to the reader.

The reader firmware can be updated with an NFC-enabled Android smartphone only.

Mobile identification

Reader supports digital personal mobile credential. It is processed and stored in the user's smartphone using the U-PROX ID application. It can be transferred over NFC and/or 2.4 GHz radio between the reader and the smartphone.


Reader supports hardware active mobile identifiers U-PROX Tag and U-PROX Auto Tag.

Reader supports 3 operation modes for smartphones with U-Prox ID:

“Door-Proximity” – 10-20 cm, reader activates by built-in proximity sensor. Recommended for double-sided doors and turnstiles

“Door” – up to 60-70 cm

“Barrier/Gate” – adjustable range of interaction from 1 to 15 m.

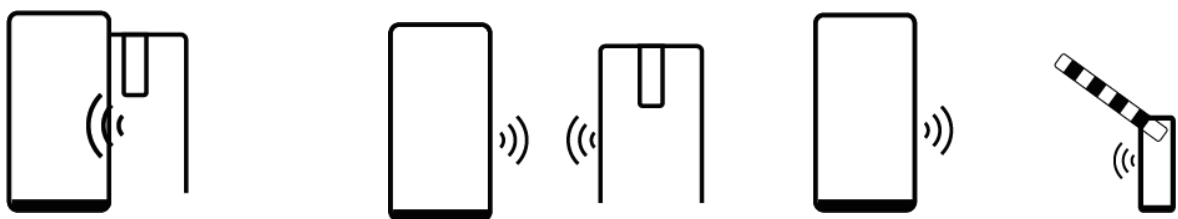

U-PROX ID application

Free mobile application U-PROX ID receives, stores and transmits mobile credentials between the reader and the smartphone.



How to obtain mobile ID

You can purchase mobile IDs from [our dealers](#)

RFID, 125 kHz

The reader supports 125 kHz cards with amplitude (ASK – EmMarine, etc.) and frequency modulation (FSK – Temik, etc.)

These cards do not have cloning protection, but are very popular due to their low cost

Mifare® identifiers

The reader supports work with Mifare® cards, reads encrypted identifiers with a user-assigned card number, with a static or diversified encryption key.

Up to five encryption profiles can be used simultaneously.

Mifare®Classic

The least secure series of cards, has a Crypto 1 (SL1) encryption algorithm vulnerability.

When using it, it is recommended to encrypt all card sectors with a diversified encryption key.

Mifare®Plus

The reader supports SL1 and SL3 modes for Mifare®Plus. It is recommended to use SL3 mode as it has the highest security and AES encryption algorithm.

Mifare®Defire

The reader supports Mifare DESFire EV1, EV2 and EV3 cards. AES encryption algorithm is supported.

Warranty

Warranty for U-PROX devices (except batteries) is valid for two years after the purchase date. If the device operates incorrectly, please contact support@u-prox.systems at first, maybe it can be solved remotely.